

PLASTEEC

100% STRONGER



DOWNLOADABLE USER MANUAL

BUMPER HEAD

Compatible with:
Dingo Tools, Bbt, Mtm, Baumar, Dino Mart, Yukon, Bauholtz & others

HOW TO OPEN THE BUMPER HEAD



STEP 1

To attach lid correctly please line up markers on base and lid.



STEP 2

Push down on tab and Rotate base clockwise.



STEP 3

Continue rotation and separate lid from base.

HOW TO CLOSE WHIPPER SNIPPER HEAD



STEP 4

Line up markers in the appropriate position for attachment.



STEP 5

Please be sure that the male and female connectors are aligned.



STEP 6

Following through from step 5.



STEP 7

Push down on tab from step 2 while applying pressure to top and bottom.



STEP 8

Following through from step 7, when tab has been pushed into lid rotate to lock into place.

ATTACHING BUMPER HEAD



STEP 1

Locate outer and inner indexing hole.




STEP 2

Apply screw driver through outer and into inner indexing hole (this is to stop the head spinning when changing over attachments.)



STEP 3

Remove off bottom nut and silver cover.

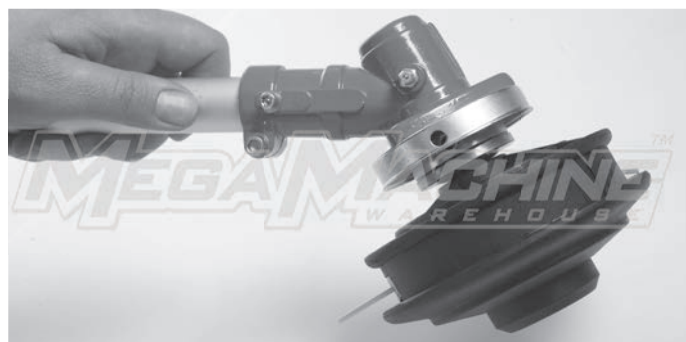

STEP 4

Apply bumper head for tightening and turn anti-clockwise until firm (locked in position.)

THANKS FROM THE TEAM AT
MEGAMACHINETM
WAREHOUSE